


Engaging the FIRE HALO – (Charged Downpipes Only)

1. Slowly turn top valve (A) fully to the left to 'CLOSE'
2. Connect hose (C) to the bottom of bottom valve (B)
3. Connect hose (C) to main water tap
4. Turn bottom valve (B) fully to the left to 'OPEN'
5. Turn ON main water tap
6. Once water is seeping from gutter slots, turn bottom valve (B) fully to the right to 'CLOSE'
7. Turn main water tap off.

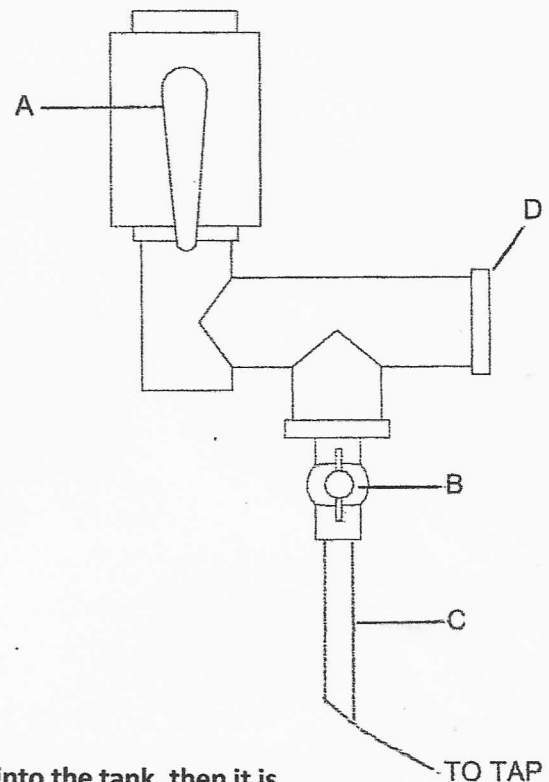

Disengaging FIRE HALO - (Charged Downpipes Only)

1. Slowly turn top valve (A) fully to the right to 'OPEN'
2. Disconnect garden hose (C)

If water in gutter is contaminated, and should not be flushed back into the tank, then it is recommended that unscrewing the side cap (D) and using a 90mm PVC pipe attached with a 90-bend elbow, and run water to the grass or garden bed. Instructions for doing this are below:

1. Leave top valve (A) in the 'CLOSED' position
 2. Unscrew side cap (D) – *May get wet during this action*
 3. Place PVC pipe with 90-bend elbow inside the PVC hole under (D) (*Optionally*)
 4. Once water has drained, tightly screw side cap (D) back on FIRE HALO
 5. Turn top valve (A) fully to the right to 'OPEN' position
- Please note that top valve (A) should remain in the 'CLOSED' position during this particular procedure.



firehalo.com.au